

Supine Stander



Supine Stander features



The large Supine Stander
provides 9" of vertical adjustment
in the horizontal position before
gradually tilting to upright.





Supported by the hand Anchor, this child is able to participate in activities she enjoys.



This client has advanced so far that the headrest can now be flipped back out of the way.



The Supine Stander stays secure at any angle. Turn the crank to gradually increase weight-bearing.

Easy transfers for large clients



The large Supine Stander makes transfers easy. The manual crank raises the stander from 21" (wheelchair height) to 30" in the horizontal position.



Use the frame's marked calibrations to record and maintain each client's optimal position.



Once upright, the client is on the same level with caregivers and peers and can interact with her environment.

Components



Tray

The tray has a smooth, cleanable surface with rounded corners. Adjust the armrests to change the angle of the tray.

Inside dimensions: 26" x 15"



Additional laterals

Add a pair of additional laterals for extra support. Laterals adjust easily even with the client in the stander.



Sandals and wedges

Sandals and wedges raise heels or toes. Configure them with the unique "stack and latch" feature. For asymmetrical leg lengths, combine two wedges under one sandal.

Small: 3" x 7", **med:** 4" x 9", **large:** 5" x 10½"



Adjustable abduction wedge

The adjustable abduction wedge can be changed from 3½" to 11" in width depending on how much abduction is desired.



Round abductor

The round abductor helps maintain 4" of comfortable knee separation.



Components (continued)



Collar


The collar adds 2" of separation to the round abductor.

(Requires round abductor)



Hand Anchor

The hand Anchor attaches to the tray with a powerful suction cup. With a secure anchor point for one arm, the user can perform tasks more easily with the other arm and hand.

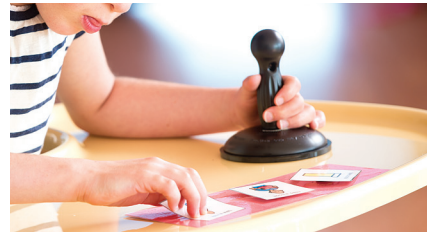

Rifton Anchor family



2021 order form

Use dimension chart to select appropriate size.



User dimensions (inches)		E420 small	E430 large
Height		30–50	46–72
 Key user dimension: height Select the appropriate stander by the user's overall height. Choose the model that allows for growth. Important: User's weight must not exceed the maximum working load.			
Item dimensions (inches)		E420 small	E430 large
Board length and width		53 x 16½	73 x 19
Distance between laterals		7–13	9–16
Height when horizontal		28½	21–30
Height when vertical		54½	74
Base length and width		37½ x 27	46½ x 29½
Max. working load (lb)		100	250

		E420 small		E430 large	
		E40	☐	E41	☐
* Supine Stander includes padding, footboard, adjustable armrests, hip strap, chest strap, leg straps, one pair of laterals, one pair of head blocks and double-locking casters.					
Additional laterals (pair)	Small	E504	☐	N/A	
	Large	N/A		E439	☐
Tray		E404	☐	E414	☐
CHOOSE	Adjustable abduction wedge	E945	☐	E945	☐
	Round abductor	E933	☐	E933	☐
Collar		E934	☐	E934	☐
Sandals (pair)	Small	E422	☐	N/A	
	Medium	E433	☐	E433	☐
	Large	N/A		E432	☐
Wedges (pair, requires sandals)	Small	E424	☐	N/A	
	Medium	E435	☐	E435	☐
	Large	N/A		E434	☐
Hand Anchor (For more hand/arm support options see pp. 104–107.)		K821	☐	K821	☐
Total		E420		E430	

* Required